




2019 KTM 790 Adventure / Adventure R fitting instructions.



1. Remove air box access panel. (Wipe clean before removing)




2. Remove air filter retaining wedge.

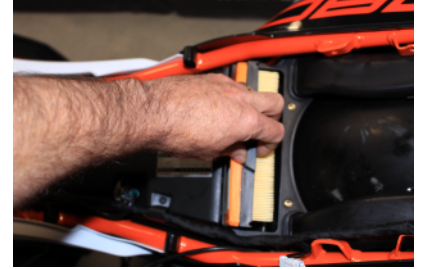

3. Remove air filter & air filter retaining box.



4. Wipe air box clean.

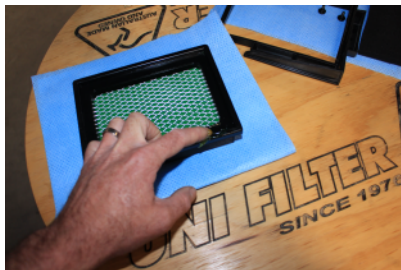

5. Unifilter recommends using sealing grease on the sealing edge of the air filter. (Bearing grease is the best option)



6. Place the air filter retaining box over the Unifilter.



7. Install the air filter back into the bike and secure with the retaining wedge.



8. Place the black sealing foam on the top side of the filter. Unifilter recommends using the foam seal to prevent dust build up on the top sealing point.



9. Re-fit the access panel and seat.